Sno-kones make cool party treats

SNO-KONE MACHINES ARE EASY TO USE AND EASILY ATTRACT A CROWD!

What a great way to entertain the kids!

Call your area A.R.A.-affiliated party rental pro to rent a Sno-kone machine for your next school event or outdoor party on a hot summer day. Kids love Sno-kones - and so do adults!



KNOW THE MACHINE

Easy to operate - easier to rent.

A Sno-kone machine is equipped with:

- 110-volt, single-phase, 60-cycle, AC-current motor with toggle switch, shaving unit, dispensing case and separate light switch inside the case
- Cutterhead mounted on the end of the motor shaft inside the shaver body (gooseneck)
- Pusher handle presses the ice against the revolving cutterhead to produce shaved ice

Note: The machine must be properly grounded to prevent electrical shock

USEFUL TIPS FOR OPERATION

Your guide to Sno-kone success.

To make the best Sno-kone:

- 1. Start the motor and fill the shaver body, often called the gooseneck, an inch from the top with ice cubes or 3" x 4" pieces of ice. The larger the ice pieces, the better the snow
- 2. Push ice down against the cutterhead with firm pressure. Too much pressure results in coarse ice; too little makes ice mushy
- 3. Do not force the handle
- 4. A surface temperature of 150-degrees F. is normal
- 5. To prevent damage to blades, insert only ice in the gooseneck
- 6. To prevent injury, keep fingers away from the shave body when motor is running

CLEANING INSTRUCTIONS

It's a snap!

- 1. Unplug the machine
- 2. Wipe all surfaces clean to avoid cleaning charges

Consult your rental center for additional equipment and accessories for your event!